

Advent Air Installation Instructions

- 1) Locate White Compressor wire on the Compressor and follow to the electrical box Run Capacitor “C” terminal. Disconnect and splice White Compressor wire connection to the Brown RVAC soft start wire.
- 2) Connect Red RVAC soft start wire to the location of the previous White Compressor wire terminal onto the Run Capacitor “C” terminal.
- 3) Connect Blue RVAC soft start wire to the “H” terminal on the Run Capacitor.
- 4) **IF** you see a second Red wire next to the Red Compressor Wire, disconnect it and seal end with electrical tape.
- 5) Locate the 3rd wire coming out of the Compressor overload switch (may be Blue or Black), route and 3-way splice the final Black RVAC soft start wire to a convenient location along the Compressor (Blue or Black) wire.