

## Dometic Cool Cat Installation Instructions

- 1) Locate White Compressor wire on the Compressor and follow to electrical box Run Capacitor “**C**” terminal. Disconnect and splice White wire connection to the Brown RVAC soft start wire.
- 2) Connect Red RVAC soft start wire to the location of the previous White Compressor wire terminal on the Run Capacitor “**C**” terminal.
- 3) Locate Start Capacitor and Disconnect and remove the Red and Yellow (or White) wires coming from the Start Capacitor.
  - a. The RVAC soft start effectively replaces the Start Capacitor, allowing for the total removal of the Start Capacitor. Though it is not entirely necessary.
- 4) **IF** there is an extra Reversing Valve connection wire going into the Start Capacitor, route the extra wire into the “**C**” terminal of the Run Capacitor.
- 5) Connect Blue soft start wire to the “**H**” terminal on the Run Capacitor.
- 6) Locate the 3<sup>rd</sup> wire coming out of the Compressor overload switch (may be Blue or Black), route and 3-way splice the final Black soft start wire to a convenient location along the Compressor’s (Blue or Black) wire.