

LG RV AC Installation Instructions

- 1) Locate Blue Compressor wire on the Compressor and follow to electrical box Run Capacitor "C" terminal. Disconnect and splice Blue Compressor wire connection to the Brown RVAC soft start wire.
- 2) Connect Red RVAC soft start wire to the location of the previous Blue Compressor wire terminal on the Run Capacitor "C" terminal.
- 3) **IF** you see a second Red wire next to the Red Compressor wire, disconnect it and seal end with electrical tape.
- 4) Connect Blue soft start wire to the "H" terminal on the Run Capacitor.
- 5) Locate the Brown wire coming out of the Compressor overload and route and 3-way splice the final Black soft start wire to a convenient location along the Compressor's Brown wire.