Advent Air

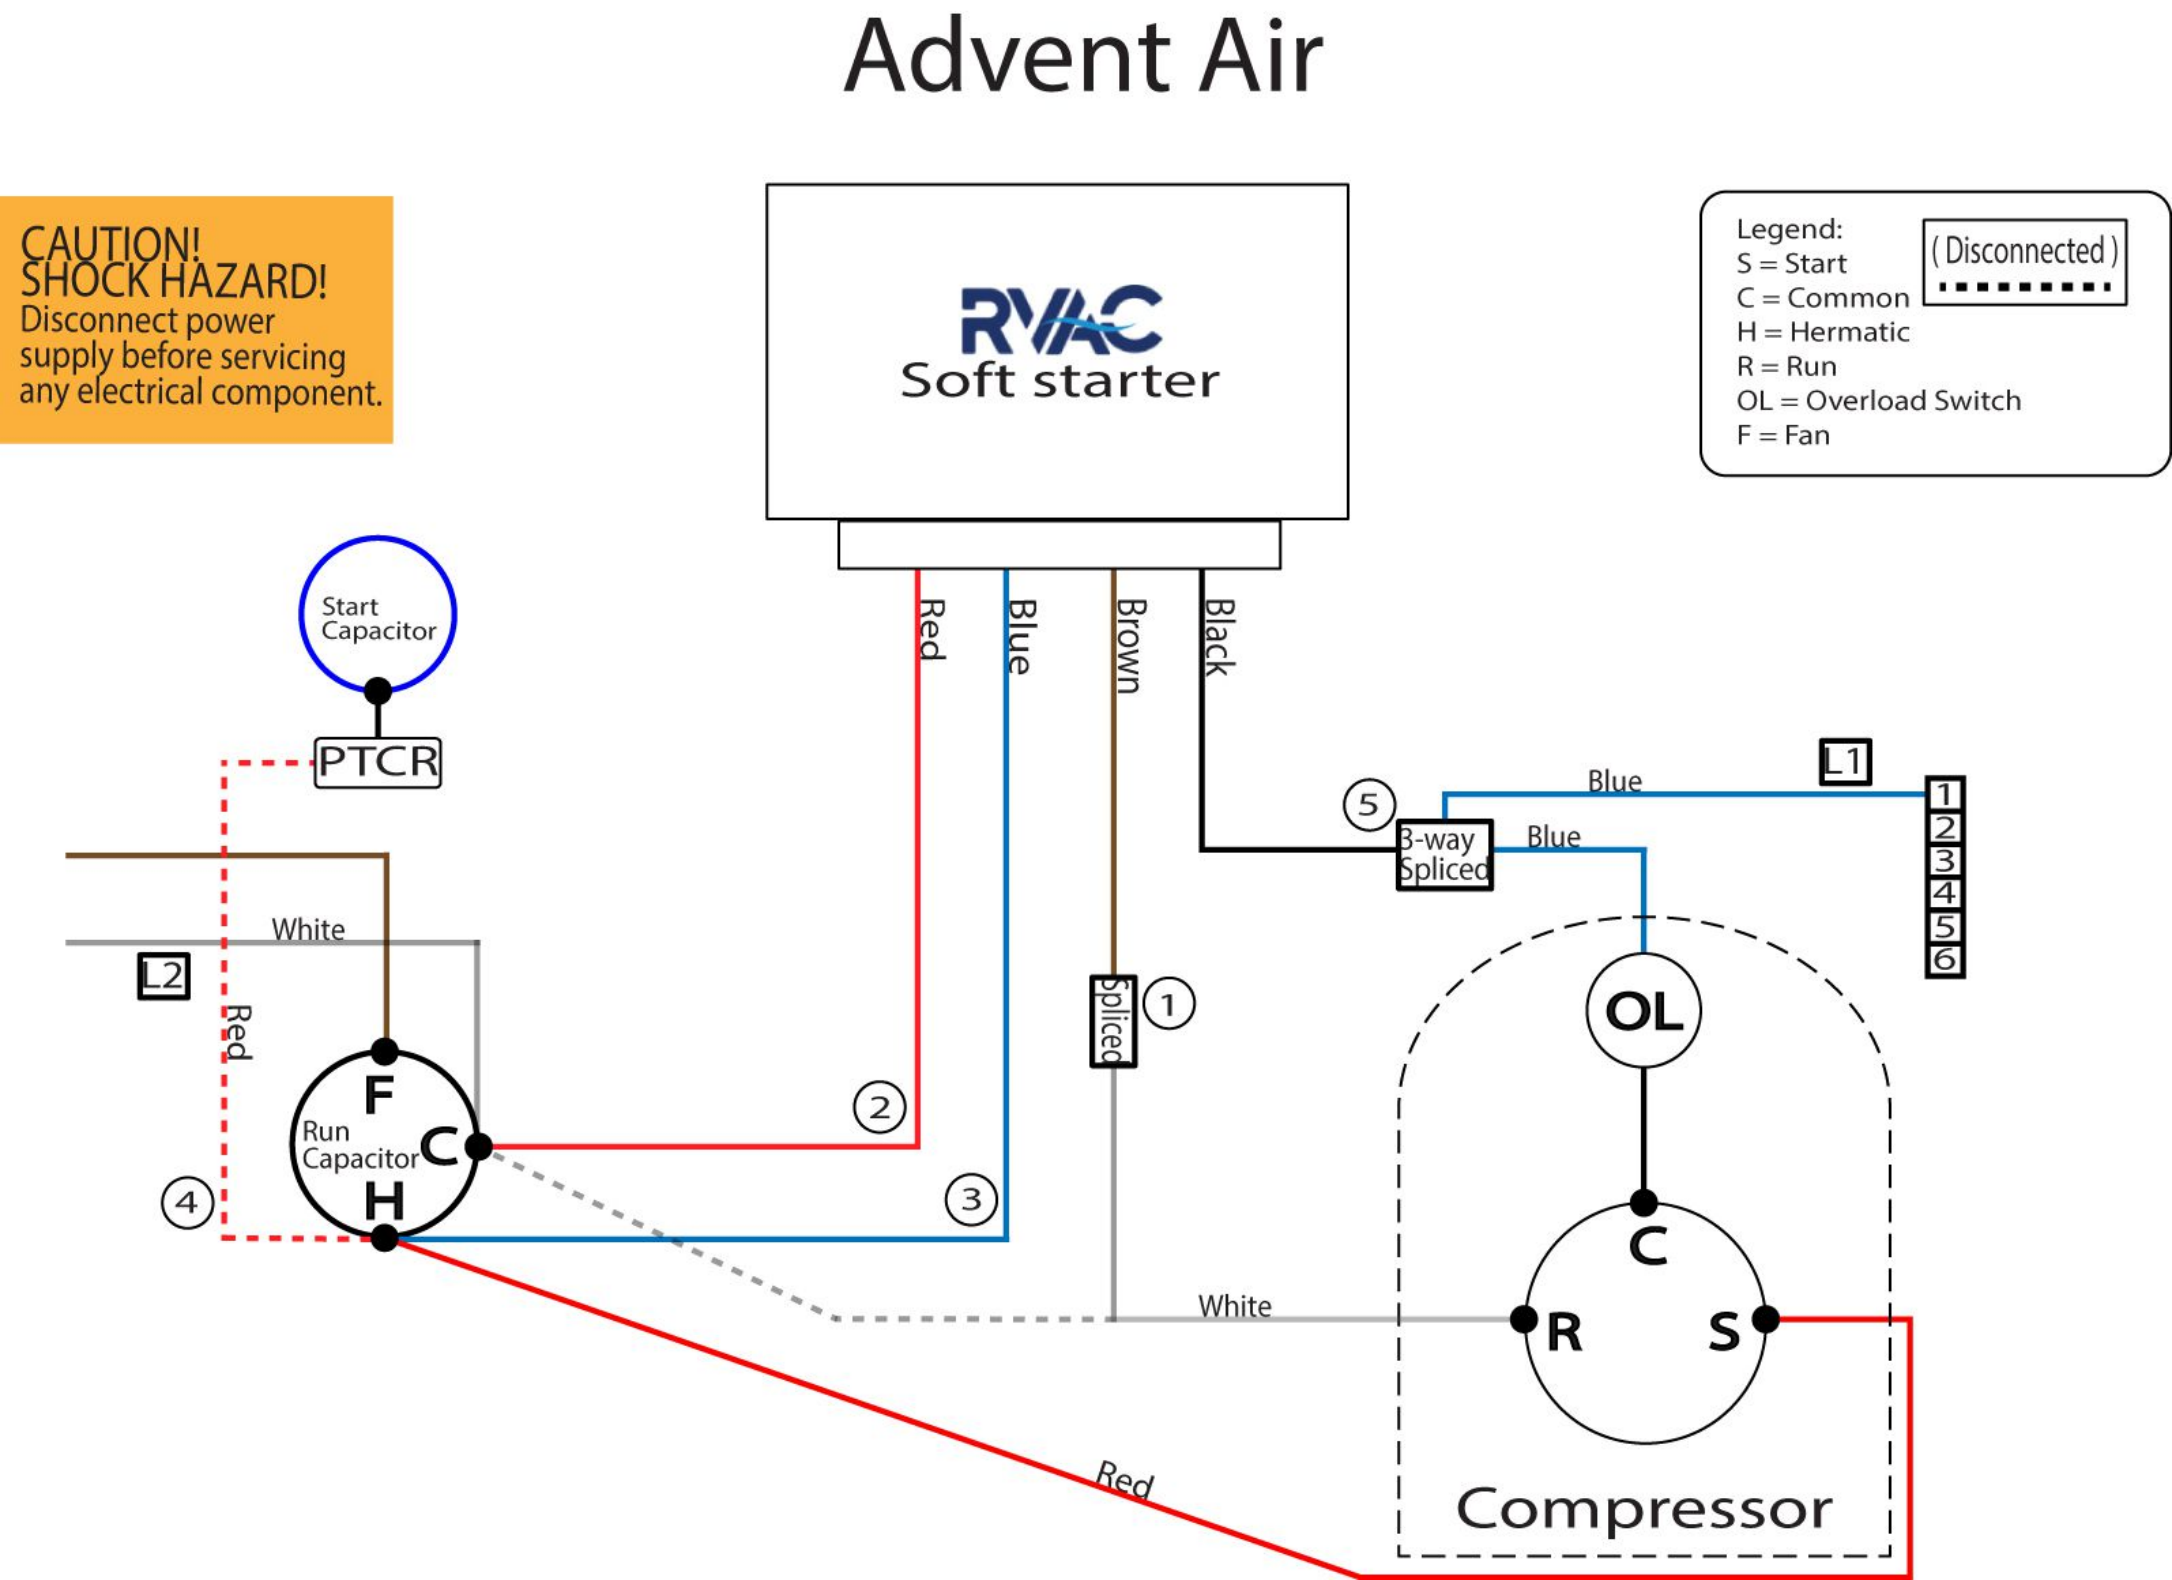
CAUTION!
SHOCK HAZARD!
Disconnect power supply before servicing any electrical component.
RVAC
Soft starter
Legend:
S = Start
C = Common
H = Hermatic
R = Run
OL = Overload Switch
F = Fan
(Disconnected)
Start Capacitor
PTCR
Red
Blue
Brown
Black
L1
L2
White
Red
F
Run Capacitor
C
H
Spliced
1
2
3
4
5
3-way Spliced
Blue
Blue
1
2
3
4
5
6
OL
C
R
S
White
Red
Compressor